
SA224-01

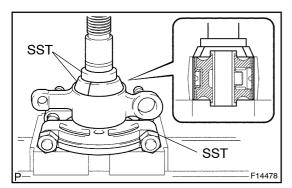


REPLACEMENT

REPLACE BUSHING

(a) Using SST and a press, remove the bushing. SST 09613–26010, 09950–00020, 09950–60010 (09951–00650)

HINT:

For SST 09613-26010, use 2 thicker half-rings as a pair.

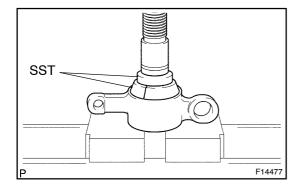


(b) Using SST and a press, reinstall a bushing as shown in the illustration.

SST 09613-26010, 09950-60010 (09951-00650)

HINT:

For SST 09613-26010, use 2 thicker half-rings as a pair.

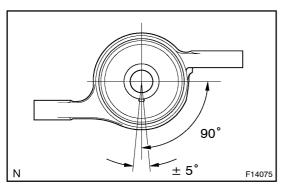

HINT:

The index tab of the new bushing should be at a right angle $(\pm 5^{\circ})$ to the center of the bracket, and facing downwards when seen from outside the vehicle.