
LUGGAGE COMPARTMENT DOOR SUPPORT ASSY REPLACEMENT

750SI-0

HINT:

- Use the same procedure for the RH side and LH side.
- The procedures listed below are for the LH side.

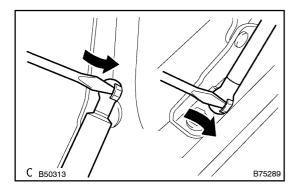

1. REMOVE LUGGAGE COMPARTMENT DOOR SUPPORT ASSY

- (a) Remove the 2 clips as shown in the illustration.
- (b) Remove the door support.

HINT:

Remove the luggage compartment door support assy while supporting the luggage compatment door with your hands.

2. INSTALL LUGGAGE COMPARTMENT DOOR SUPPORT ASSY

- (a) Insert the 2 clips for the door support.
- (b) Install the support for the luggage compartment door hinge.