CLOCK TROUBLESHOOTING

BE0D1-05

HINT:


Problem	No.
Clock will not operate	1
Clock loses or gains time	2

± 1.5 seconds/day

1. PROBLEM NO.1

1


CLOCK WILL NOT OPERATE

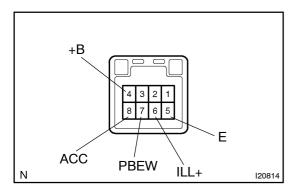

- (a) Turn the ignition switch ON.
- (b) Check that the battery voltage is 10 16 V. If voltage is not as specified, replace the battery.
- (c) Troubleshoot the clock as follows.

HINT:


Inspect the connector on the wire harness side.

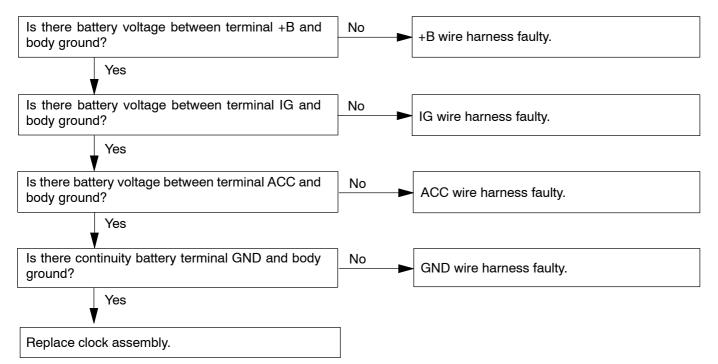

2

2. PROBLEM NO.2

CLOCK LOSES OR GAINS TIME

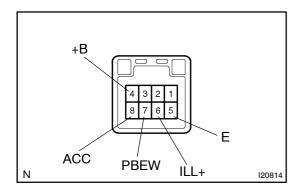

- (a) Check that the battery voltage is 10 16 V. If voltage is not as specified, replace the battery.
- (b) Inspect the error of the clock.

Allowable error (per day): \pm 2.0 seconds

If the error exceeds the allowable error, replace the clock assembly.

- (c) Check if the clock adjusting button is sticking in position and has failed to return.
- (d) Troubleshoot the clock as follows.

HINT:

Inspect the connector on the wire harness side.

